


Ordering

EVR flare connections, Normally Closed (NC) - separate valve bodies

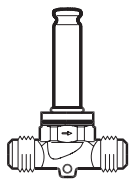

Type	Coil type	Connection size [in.]	Connection size [mm]	Manual operation	Max. working pressure [bar]	k _v value [m ³ /h]	Code no.
EVR 2	a.c.	1/4	6	No	45.2	0.16	032F8056
EVR 3	a.c. / d.c.	1/4	6	No	45.2	0.27	032F8107
	a.c. / d.c.	3/8	10	No	45.2	0.27	032F8116
EVR 6	a.c. / d.c.	3/8	10	No	45.2	0.80	032F8072
	a.c. / d.c.	1/2	12	No	45.2	0.80	032F8079
EVR 10	a.c. / d.c.	1/2	12	No	35	1.9	032F8095
	a.c. / d.c.	5/8	16	No	35	1.9	032F8098
EVR 15	a.c. / d.c.	5/8	16	No	32	2.6	032F8101
	a.c. / d.c.	5/8	16	Yes	32	2.6	032F8100

EVR flare connections, Normally Open (NO) - separate valve bodies

Type	Coil type	Connection size [in.]	Connection size [mm]	Manual operation	Max. working pressure [bar]	k _v value [m ³ /h]	Code no.
EVR 6	a.c. / d.c.	3/8	10	No	45.2	0.80	032F8085
EVR 10	a.c. / d.c.	1/2	12	No	35	1.9	032F8090

Valve bodies are supplied without flare nuts.

Separate flare nuts:

- 1/4 in. or 6 mm, code no. **011L1101**
- 3/8 in. or 10 mm, code no. **011L1135**
- 1/2 in. or 12 mm, code no. **011L1103**
- 5/8 in. or 16 mm, code no. **011L1167**

See separate data sheet for coils.

The normal range of coils can be used for the NO valves, with the exception of the double frequency versions of 110 V, 50/60 Hz and 220 V, 50/60 Hz.