
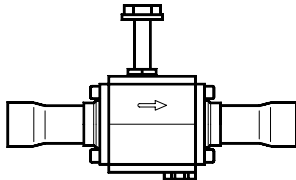
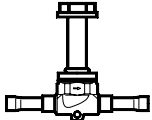


Ordering (fortsat)

Components

Flare and solder connections



Separate valve bodies, normally closed (NC)

Type	Required coil type	Connection		Code no. Valve body without coil				
				Flare 1)		Solder ODF		
		in.	mm	in./mm	in.	mm	With manual operation	Without manual operation
EVR 2	a.c.	1/4	6	032F1200	032F1201	032F1202		
EVR 3	a.c./d.c.	1/4	6	032F1205	032F1206	032F1207		
		3/8	10	032F1203	032F1204	032F1208		
EVR 6	a.c./d.c.	3/8	10	032F1211	032F1212	032F1213		
		1/2	12	032F1235	032F1209	032F1236		
EVR 10	a.c./d.c.	1/2	12	032F1215	032F1217	032F1218		
		5/8	16	032F1238	032F1214	032F1214		
EVR 15	a.c./d.c.	5/8	16	032F1221	032F1228	032F1228		
		5/8	16	032F1231 2)			032F1227	
		7/8	22		032F1225	032F1225		
EVR 20	a.c.	7/8	22		032F1240	032F1240		
		7/8	22				032F1254	
	d.c.	1 1/8	28		032F1244	032F1245		
		7/8	22		032F1264	032F1264		
EVR 22	a.c.	7/8	22				032F1274	
		1 3/8	35		032F3267	032F3267		
EVR 25	a.c./d.c.	1 1/8					032F2200	032F2201
			28				032F2205	032F2206
		1 3/8	35				032F2207	032F2208
EVR 32	a.c./d.c.	1 3/8	35				042H1105	042H1106
		1 5/8					042H1103	042H1104
EVR 40	a.c./d.c.		42				042H1107	042H1108
		1 5/8					042H1109	042H1110
			42				042H1113	042H1114
		2 1/8	54				042H1111	042H1112

Separate valve bodies, normally open (NO) 3)

Type	Required coil type	Connection		Code no. Valve body without coil 3)			
				Flare 1)		Solder ODF	
		in.	mm	in.	mm	in.	mm
EVR 6	a.c./d.c.	3/8	10	032F1289	032F1289	032F1290	032F1295
EVR 10		1/2	12	032F1293	032F1293	032F1291	032F1296
EVR 15		5/8	16	032F1297	032F1297	032F1299	032F1299
		7/8	22			032F3270	032F3270
EVR 20		7/8	22			032F1260	032F1260
	1 1/8	28			032F1269	032F1279	
EVR 22	a.c.	1 3/8	35			032F3268	032F3268

1) Valve bodies are supplied without flare nuts.

Separate flare nuts:

1/4 in. or 6 mm, code no. 011L1101

3/8 in. or 10 mm, code no. 011L1135

1/2 in. or 12 mm, code no. 011L1103

5/8 in. or 16 mm, code no. 011L1167

2) With manual operation.

3) The normal range of coils can be used for the NO valves, with the exception of the double frequency versions of 110 V, 50/60 Hz and 220 V, 50/60 Hz.

Coils

See "Coils for solenoid valves", RD.3J.B2.02.